




POS-100A / POA-100B / POA-1000A

Quick Installation Guide

Package Content

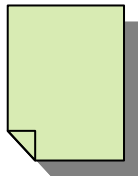

Quick
Installation
Guide



PoE Splitter x 1,
DC jack cable x 1,
Ethernet cable x 1



4 DC jack cable
connector





PoE Injector x 1



Power Cord x 1

Installation Steps

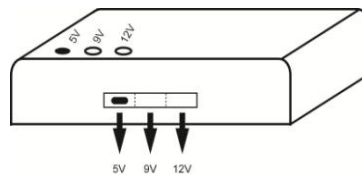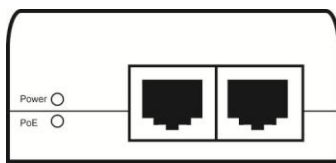

1. Connect AC Power cord to PoE injector, and "Power" LED will be lit.
2. Connect Data/IN port of Injector to LAN switch via Ethernet cable, and set the correct voltage (5V or 9V or 12V) (default 5V) via voltage selector on the side of PoE splitter.
3. Connect to "Power+Data" port of splitter and "P+D/Out" port of Injector with Ethernet cable, making sure "Power" LED of splitter is lit.
4. Select the proper DC jack size for the cable, then connect power jack of the powered device to "Power OUT" port of splitter.
5. Check whether the powered device is on. If not, please make sure that power of Injector and Splitter is on, and all cables are well connected.

