

# Lantech

## IPGS-0016

16 10/100/1000T Industrial Unmanaged PoE  
Ethernet Switch

## IPES-0016

16 10/100TX Industrial Unmanaged PoE Ethernet  
Switch

### User Manual



V1.06

NOV. 2024

RP-001-31

### Notice

Only 24VDC input system is applicable for E-mark approval.

The unmanaged PoE Ethernet switch is equipped with P.S.E capacity. It is designed for data communication within vehicles, to facilitate data transfer and Ethernet connectivity as well as expandability. It's important to note that these features have no impact on the safety of driving and passenger well-being and the device does not possess any immunity-related functionalities.


## Approval Information

<b>Version 1.06</b>	<b>Name</b>	<b>Title</b>	<b>Date</b>
<b>Author</b>	Greg Tsai	Marketing	2024.11.27
<b>Verifier</b>	Jacky Chou	HW QA	2024.11.27
<b>Approver</b>	Thomas Lee	RD head	2024.11.27

<b>Version</b>	<b>Date</b>	<b>Content of Modification</b>	<b>Author(s)</b>
<b>V1.00</b>	2021.06.21		Greg Tsai
<b>V1.01</b>	2022.03.04	Update the warning content of PoE.	Greg Tsai
<b>V1.02</b>	2022.11.02	Update the warning content of PoE.	Greg Tsai
<b>V1.03</b>	2023.10.16	Update the warning content of PoE.	Greg Tsai
<b>V1.04</b>	2024.05.14	Update the content for E-Marking	Greg Tsai
<b>V1.05</b>	2024.11.19	Update on PoE Budget Usage Guidelines	Greg Tsai
<b>V1.06</b>	2024.11.27	Update the DIN Rail installation guide	Greg Tsai

## Recommendation for Shielded network cables

STP cables have additional shielding material that is used to reduce external interference. The shield also reduces the emission at any point in the path of the cable. Our recommendation is to deploy an STP network cable in demanding electrical environments. Examples of demanding indoor environments are where the network cable is located in parallel with electrical mains supply cables or where large inductive loads such as motors or contactors are in close vicinity to the camera or its cable. It is also mandatory to use an STP cable where the power device (like IP camera) is used outdoors or where the network cable is routed outdoors.

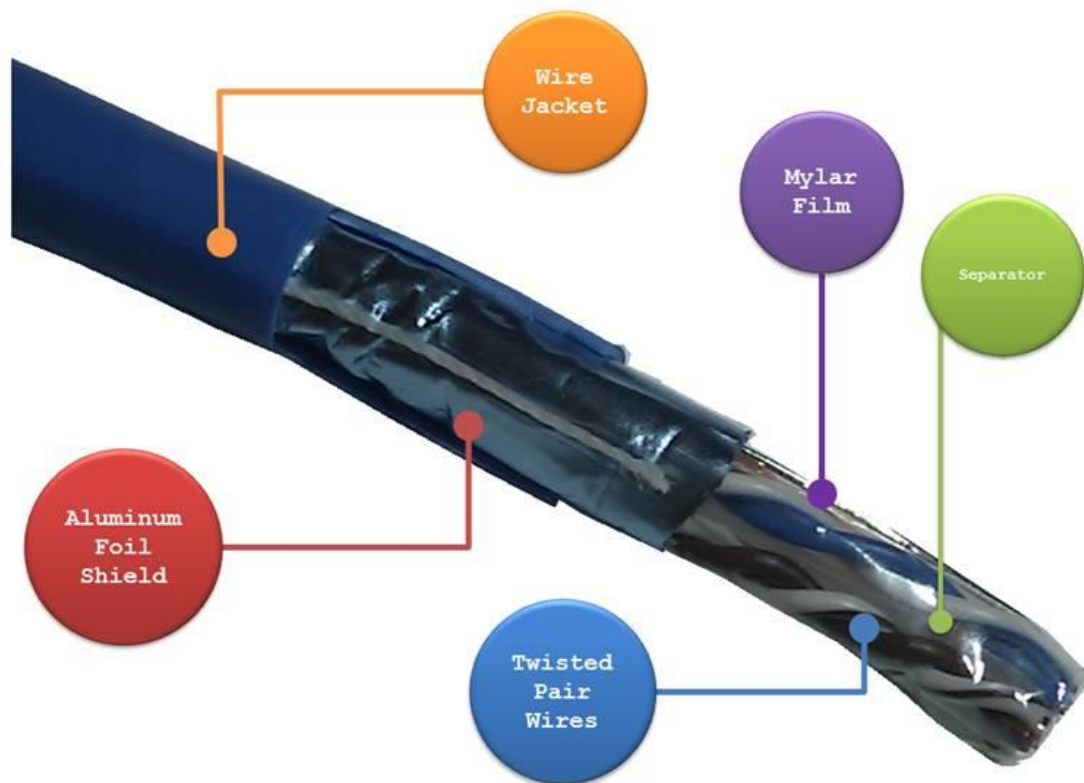

# Content

---

Overview .....	1
Introduction .....	1
Model Lists .....	1
Packing List.....	2
Safety Precaution .....	2
Hardware Description.....	3
Front Panel.....	3
Top View .....	4
Dimensions .....	4
Wiring the Power Inputs .....	6
Wiring the Fault Alarm Contact .....	6
LED Indicators.....	8
RJ-45 Pin Assignments.....	9
Cabling .....	11
Mounting Installation .....	12
DIN-Rail Mounting.....	12
Wall-Mount Plate Mounting .....	14

Hardware Installation .....	16
Installation Steps .....	17
Troubleshooting .....	18

# Overview

---

## Introduction

The unmanaged industrial switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications.

## Model Lists

<b>Model name</b>	<b>10/100/1000T ports</b>	<b>10/100TX ports</b>	<b>PoE ports</b>	<b>Operating Temperature</b>
IPGS-0016	16	-	16	-20°C~60°C / -4°F~140°F
IPGS-0016-E	16	-	16	-40°C~75°C / -40°F~167°F
IPES-0016	-	16	16	-20°C~60°C / -4°F~140°F
IPES-0016-E	-	16	16	-40°C~75°C / -40°F~167°F

For latest product specifications, please refer to [Lantech official site](#).

## **Packing List**

- 1 x 16-port Industrial Ethernet Switch
- 1 x Terminal Block

## **Safety Precaution**

*Attention* If DC voltage is supplied by an external circuit, please use a protection device on the power supply input.

# Hardware Description

---



**For POE models: Do not use units' POE ports to uplink to another POE switch in vehicle applications. (May Cause Damage) Lantech strongly advise the installation of a Galvanic isolated DC/DC converter between the power supply and the Ethernet switch on all Non-Isolated models. Please contact the sales team for advice on which models support isolated power design.**

## **Alert! PoE Budget for Unmanaged POE Switch Model**

Each PoE switch model has its own PoE budget limit, which will supply PoE power according to the port sequence and devices' PoE classification. On an unmanaged PoE switch, power distribution is based on the device's class level, determined through a handshaking process per port. The switch will deduct the used budget for each connected device, leaving the remaining budget for subsequent devices based on their class negotiation, rather than distributing a fixed 15W per port.


To avoid issues, calculate the PoE consumption of all connected devices beforehand. If the total PoE requirement exceeds the budget, the switch may shut down and attempt to reboot. If the PoE demand remains over budget after rebooting, the switch will continue to experience power failures.

In this paragraph, we will introduce the Industrial switch's dimensions, port, cabling information, and wiring installation.

## **Front Panel**

The Front Panel of the **IPGS-0016/ IPES-0016** are shown as below.




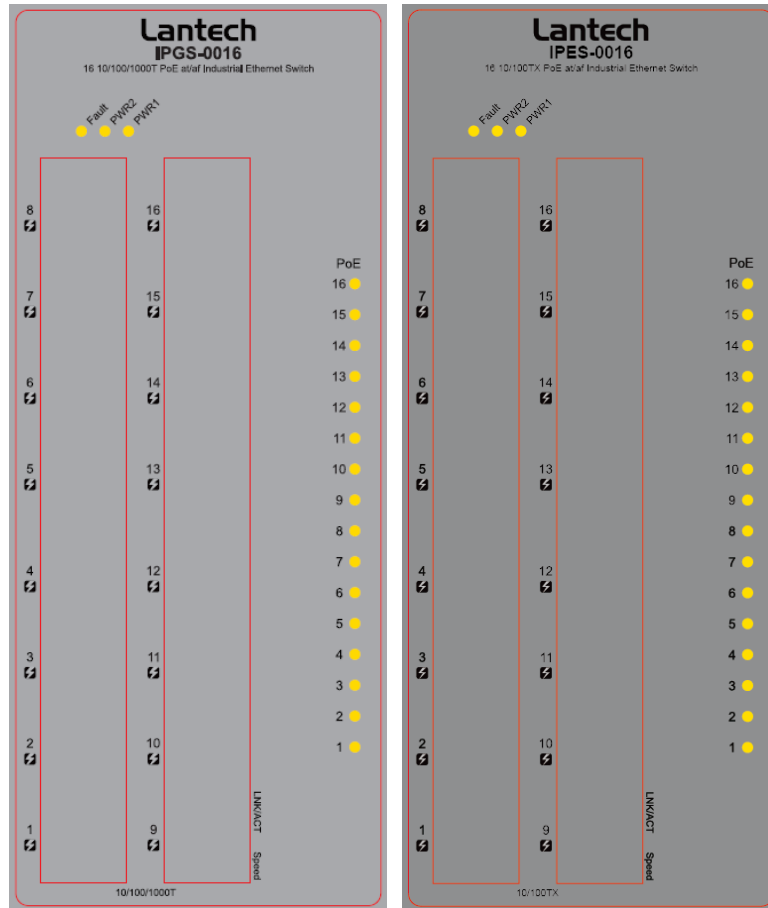

Front Panel of the Industrial Switch

## Top View


The top panel of the Industrial Switch is equipped one terminal block connector of two DC power inputs.

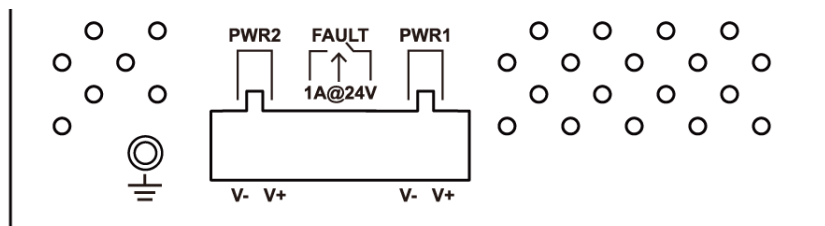

Top panel of the Industrial Switch Converter


## Dimensions

. The dimensions of IPGS-0016/IPES-0016 are 74 x 152 x 105 mm (W x H x D). The figure below gives the dimensions and views of each side of the 16-port Industrial Ethernet Switch.

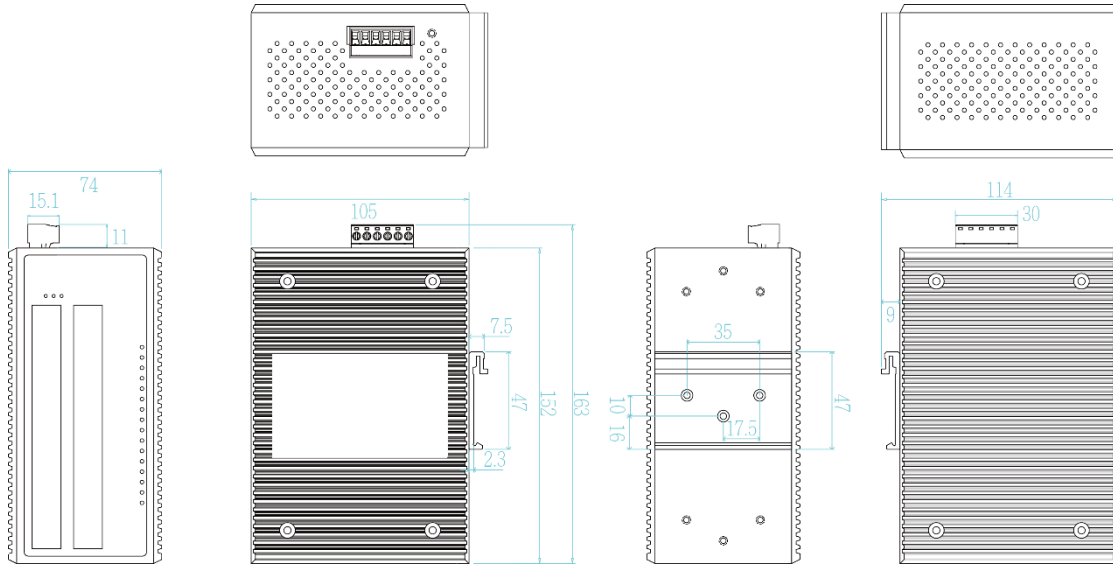

## Wiring the Power Inputs

Please follow the steps below to insert the power wire.

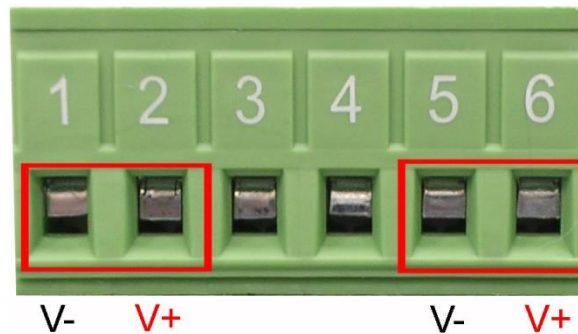

1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.




2. To tighten the wire-clamp screws for preventing the DC wires to loose.

**Note: 50-57VDC input is recommended for 802.3at 30W applications.**

## Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of terminal block connector as the picture shows below. Inserting the wires, it will detect the fault status which the power is failure or port link failure (for managed model) and form an open circuit.

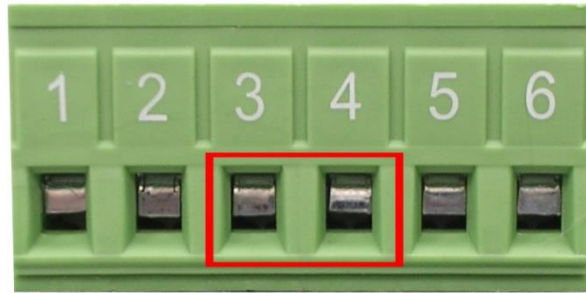

Insert the wires into the fault alarm contact (No. 3 & 4)

---

**Note**      *The wire gauge for the terminal block should be in the range between 12~ 24 AWG.*

---

## LED Indicators

The LED indicators located on the front panel display the power status and network status of the Industrial switch; each has their own specific meaning as the table shown below.

LED	Color	Description	
PWR1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
PWR2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
Fault	Red	On	Power input 1 or 2 is inactive
		Off	Power input 1 and 2 are both functional, or no power inputs
1 ~ 16 (Upper LED)	Green	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network
1 ~ 16 (Lower LED)	Yellow	On	Connected to network at speed of 1000Mbps (IPGS-0016 only)
		Off	Not connected to network or not working at speed of 1000Mbps (IPGS-0016 only)
PoE indicator (Port 1 ~ 16)	Green	On	The port is supplying power to the powered-device
		Off	No powered-device attached or power supplying fails

## RJ-45 Pin Assignments

The UTP/STP ports will automatically sense for Fast Ethernet (10Base-T/100Base-TX) or Gigabit Ethernet (10Base-T/100Base-TX/1000Base-T) connection. Auto MDI/MDIX means that the switch can connect to another switch or workstation without changing straight through or crossover cabling. See the figures below for straight through and crossover cable schema.

### ■ 10/100Base-TX Pinouts



Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-

*Note* “+” and “-” signs represent the polarity of the wires that make up each wire pair.


The table below shows the 10Base-T/100Base-TX MDI and MDI-X port pinouts.

Pin Number	MDI-X Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

■ **10/100Base-TX Cable Schema**

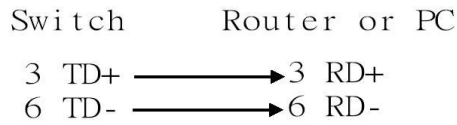

**Straight Through Cable Schema**

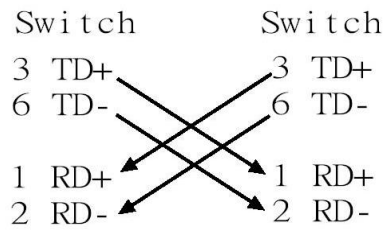

**Crossover Cable Schema**


■ **10/100/1000Base-T Pinouts**

The table below describes the gigabit Ethernet RJ-45 pinouts.


Pin	Signal name	Description
1	BI_DA+	Bi-directional pair A+
2	BI_DA-	Bi-directional pair A-
3	BI_DB+	Bi-directional pair B+
4	BI_DC+	Bi-directional pair C+
5	BI_DC-	Bi-directional pair C-
6	BI_DB-	Bi-directional pair B-
7	BI_DD+	Bi-directional pair D+
8	BI_DD-	Bi-directional pair D-

■ **10/100/1000Base-T Cable Schema**

The following two figures illustrate the 10/100/1000Base-T cable schema.

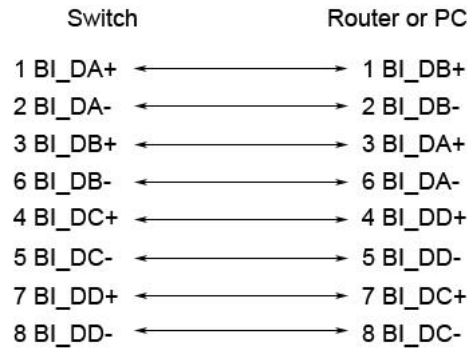

Straight Through Cable Schema

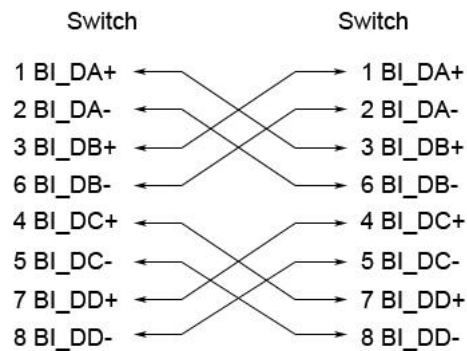

Crossover Cable Schema

## Cabling

Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 3, 4 or 5 cable for 10Mbps connections, 100Ω Category 5 cable for 100Mbps, or 100Ω Category 5e/above cable for 1000Mbps connections.

The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.



# Mounting Installation


---

## DIN-Rail Mounting

### Assembling the DIN-Rail Clip

The DIN-rail clip is screwed on the industrial switch when out of factory. If not, please refer to the following steps and figure to secure the DIN-rail clip on the switch.

- 1, Use the screws to screw on the DIN-rail clip on the industrial switch.
- 2, To remove the DIN-rail clip, reverse step 1.

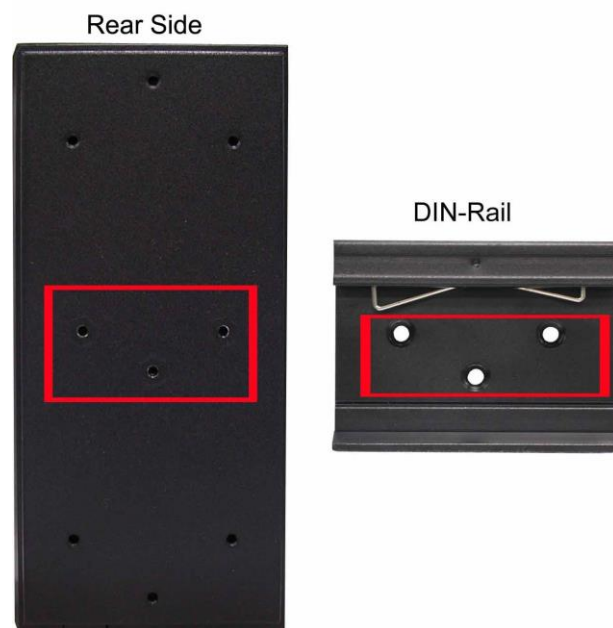

Rear side of the PoE Injectors Industrial Switch

## Hanging the Industrial Switch

Follow the steps below to mount the industrial switch on the DIN rail:


1. Position the switch so that the upper edge and spring of the DIN clip, which is located within the top of the DIN rail bracket, engage with the top section of the DIN rail. Push down to compress the spring.

---


**Note:** Ensure a secure installation by verifying that the DIN clip's spring firmly locks into the rail groove

---


2. Rotate the switch to align the bottom hook of the DIN clip with the bottom section of the DIN rail and clamp it in place (refer to the image).

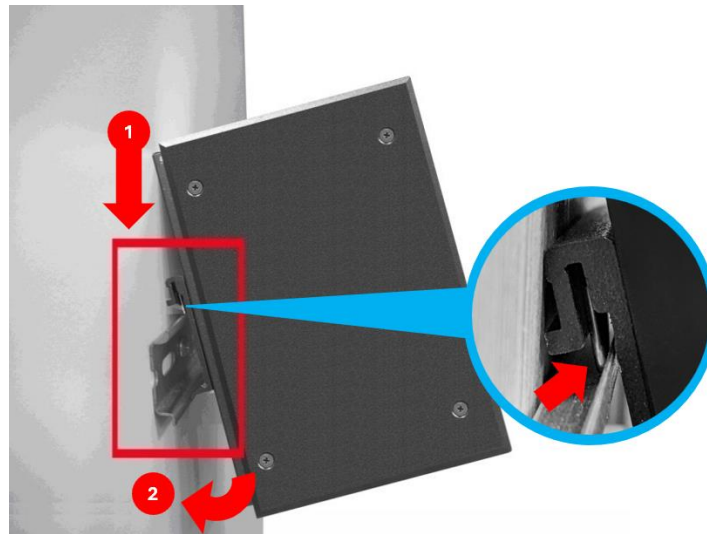

3. Verify that the DIN rail clip is securely attached to the DIN rail.

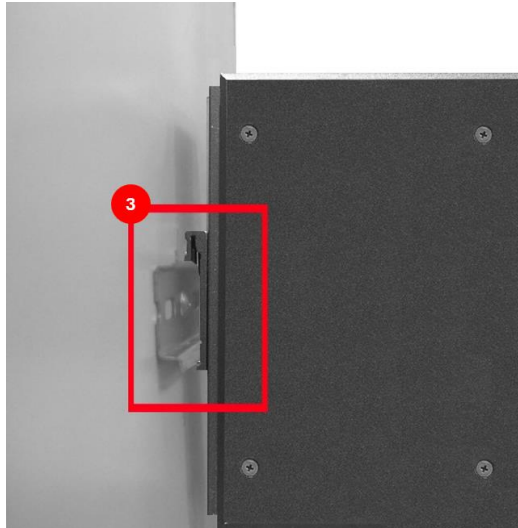

4. To remove the industrial switch, press down to compress the DIN clip spring.
5. Grasp the lower part of the switch and rotate it away from the DIN rail (refer to the image).

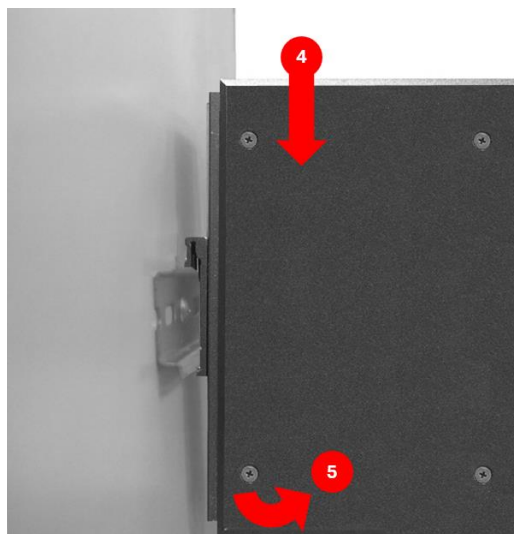

## Wall-Mount Plate Mounting


**\*Optional Wall Mount Kit required**

Please refer to figure and follow the steps below to mount the industrial switch with wall-mount bracket, and the detail dimension of the bracket as below.


1. Remove the DIN-Rail bracket from the switch; loose the screws to

remove it.

2. Place the wall-mount bracket on the top side and bottom side of the switch.
3. Use the screws to screw the wall-mount bracket on the switch.
4. Use the hook holes at the corners of the wall-mount bracket to hang the industrial switch on the wall.
5. To remove the wall-mount bracket, reverse steps above.

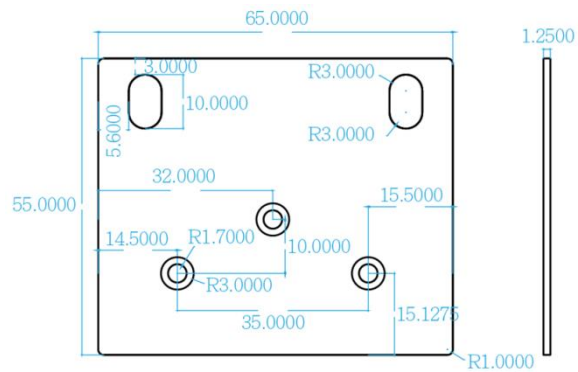


**NOTE : Wall mount kits are optional accessories**

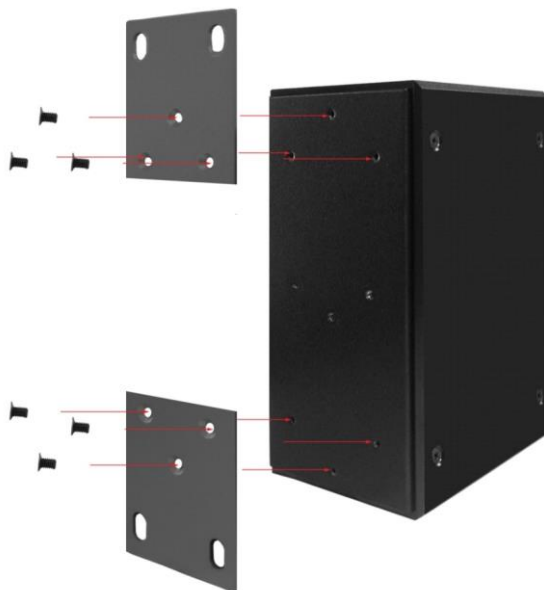

# Hardware Installation

---

In this paragraph, we will describe how to install the 8-port 10/100/1000Base-TX Industrial Switch and the installation points for the attention.

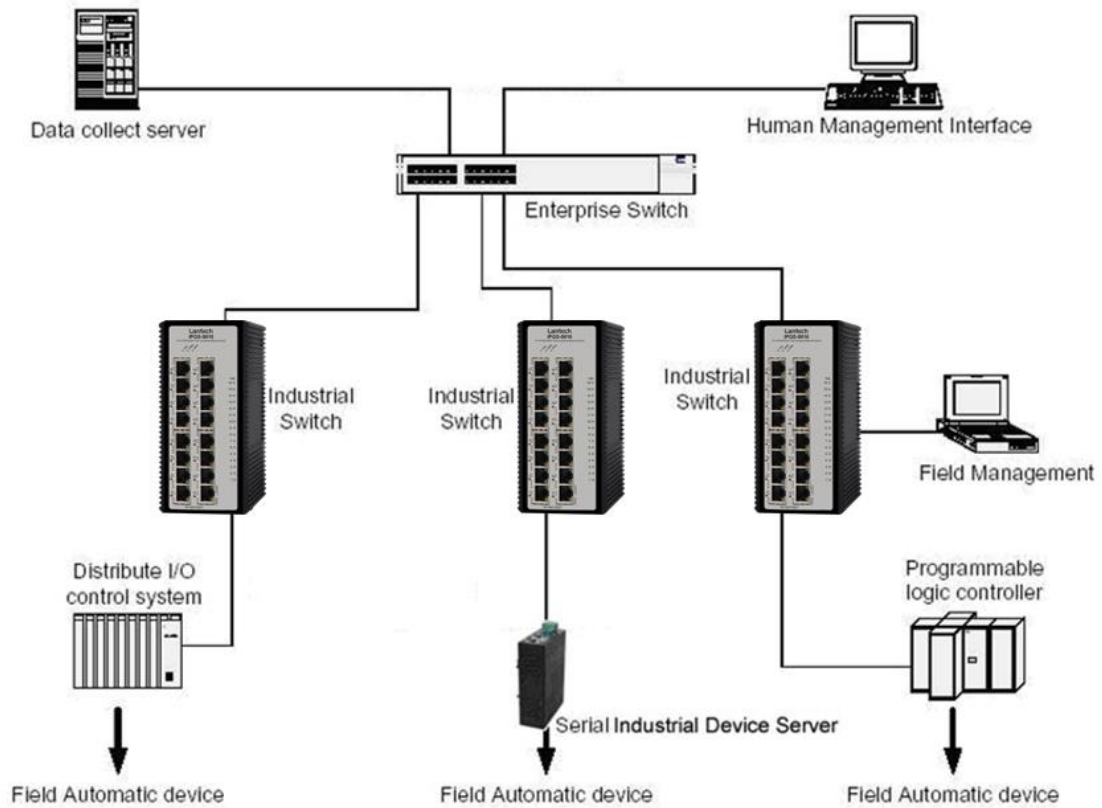

## Installation Steps

1. Unpacked the Industrial switch.
2. Check the DIN-Rail is screwed on the Industrial switch. If the DIN-Rail is not screwed on the Industrial switch. Please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If you want to wall mount the Industrial switch, then please refer to **Wall-Mount Plate Mounting** section for wall mount plate installation.
3. To hang the Industrial switch on the DIN-Rail track or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. How to wire the power; please refer to the **Wiring the Power Inputs** section. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for meaning of LED lights.
5. Prepare the twisted-pair, straight through Category 5e cable for Ethernet connection.
6. Insert one side of Category 5e or above cable into the Industrial switch RJ-45 port and another side of category 5e or above cable to the network devices' RJ-45 port, ex: switch, PC or Server. The RJ-45 LED indicator on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light meaning.
7. When all connections are all set and LED lights all show in normal, the installation is complete.

# Troubleshooting

---

- Verify that you are using the included or appropriate power cord/adaptor. Don't use the power adapter with DC output higher than the power rating of the device. Otherwise, the device will burn down.
- Select the proper UTP/STP cable to construct your network. Please check that you are using the right cable. Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 3, 4 or 5 cable for 10Mbps connections, 100Ω Category 5 cable for 100Mbps, or 100Ω Category 5e/above cable for 1000Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** The Switch can be easily monitored through panel indicators, which describes common problems you may encounter and where you can find possible solutions, to assist in identifying problems.
- IF the power indicator does not light on when the power cord is plugged in, you may have a problem with power cord. Then check for loose power connections, power losses or surges at power outlet. If you still cannot resolve the problem, contact your local dealer for assistance.
- If the Industrial switch LED indicators function normal and the connected cables are correct but the packets still cannot transmit, please check your system's Ethernet devices' configuration or status.